












# Assembly Instruction

1*1		A*6+1EXT	 M6*30MM
2*1		B*4+1EXT	 M6*25MM
3*1		G*2	
4*1			

## STEP 1

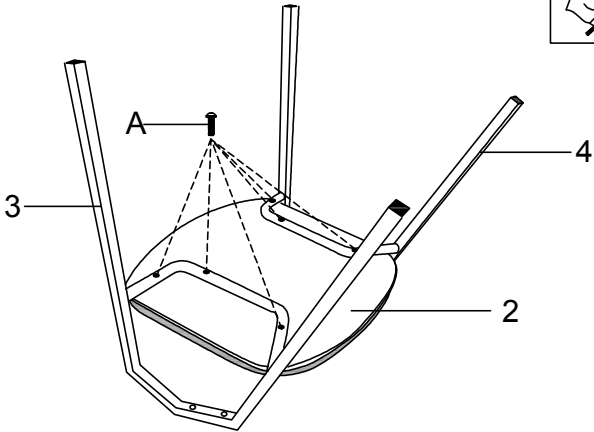

## STEP 2

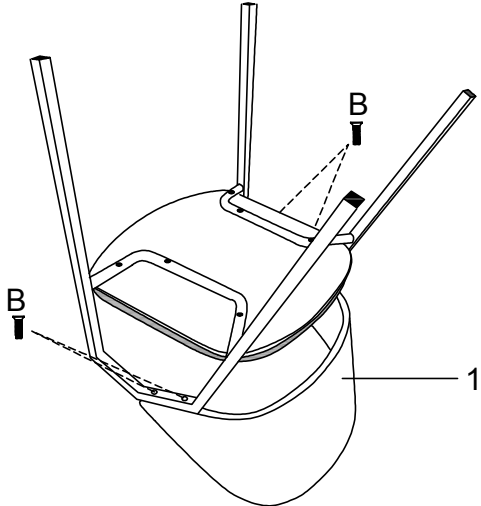

Fasten All screws indicate on Step 1 & Step 2.

## STEP 3

